

# Cleaning Manual

## *Table of contents*

### Page 1:

1. Go to the "Devices and Printers"
2. Choose your printer
3. Open the "Printer Preferences"

### Page 2:

4. After opening the "Printer Preferences" you can go to "Tools"

### Page 3:

5. Click on "Cleaning Tool" to start the cleaning process

### Page 4:

6. Follow the instructions to clean the printer.
7. Click on next after you followed the instructions.

### Page 5:

8. The same with the next window.
9. Click on next after you followed the instructions.

### Page 6:

10. Click on next to start the cleaning process.

### Page 7:

11. It takes a few seconds to clean the printer.

### Page 8:


12. After the printer is done with his cleaning process you can press finish to exit.

### Page 9:


13. How to change the cleaning roller.
14. How to clean the printhead.

# How to clean the printer


1. Go to the „Devices and Printers“
2. Choose your printer
3. Open the “Printer Preferences”

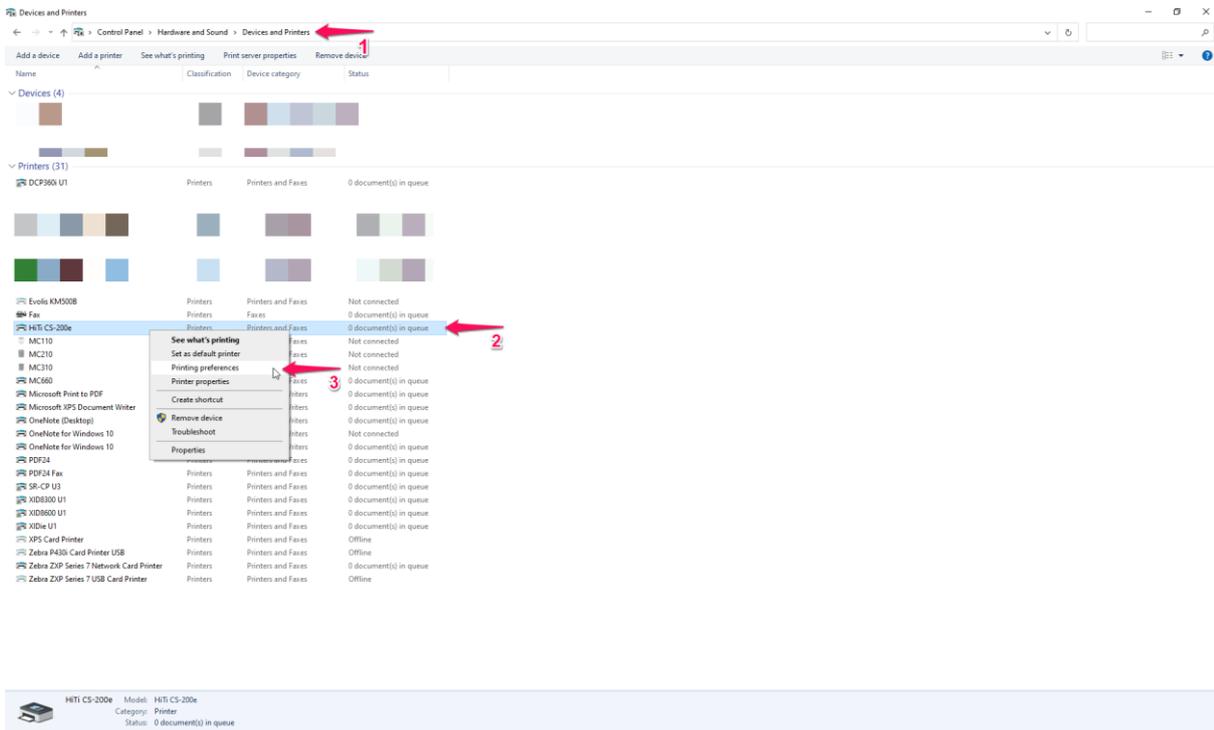

4. After opening the “Printer Preferences” you can go to “Tools”

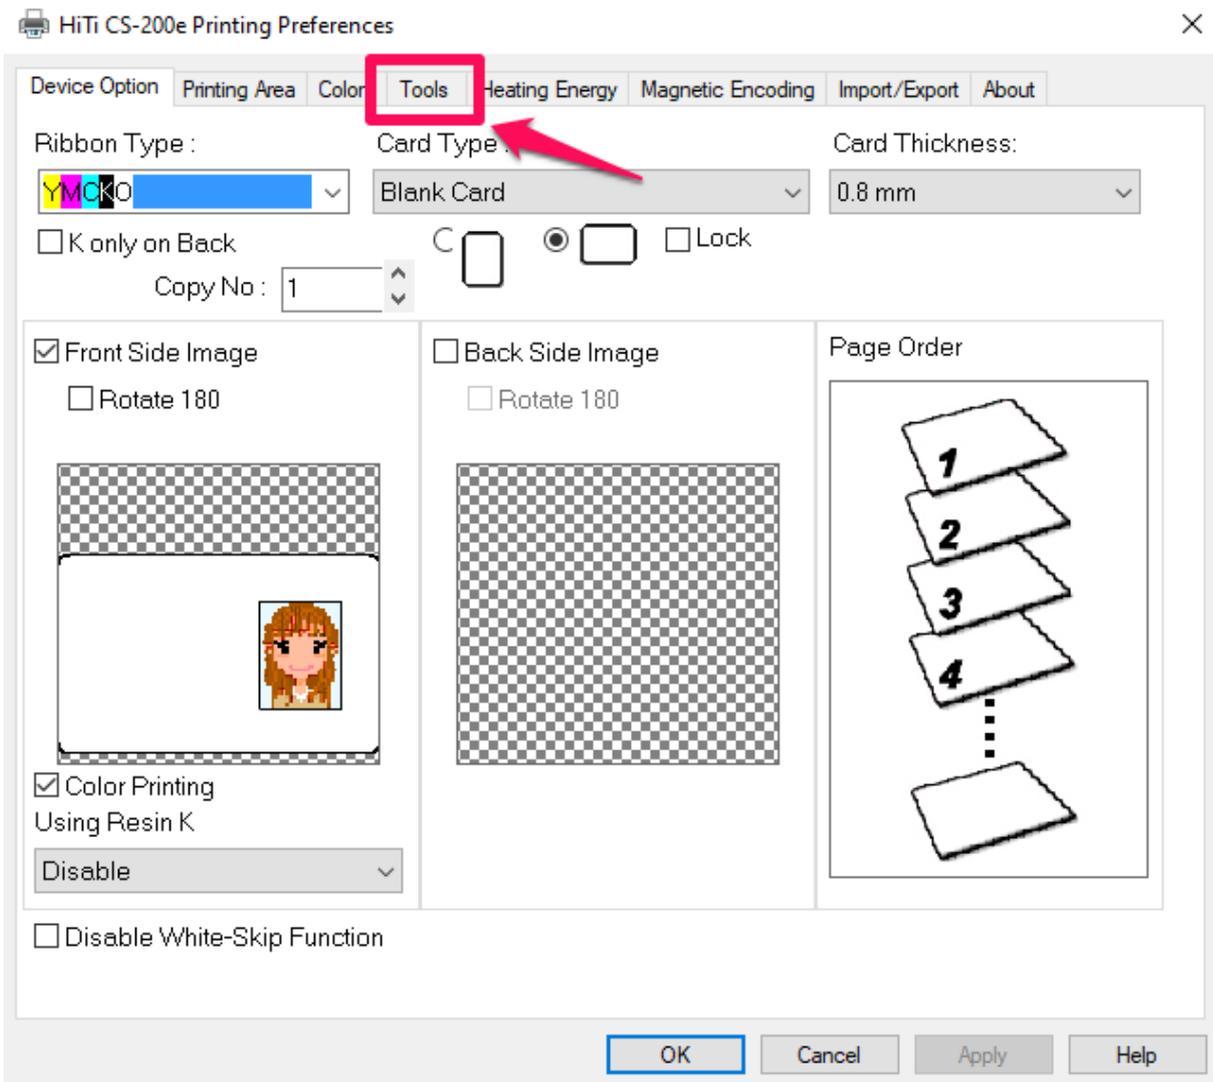

5. Click on “Cleaning Tool” to start the cleaning process

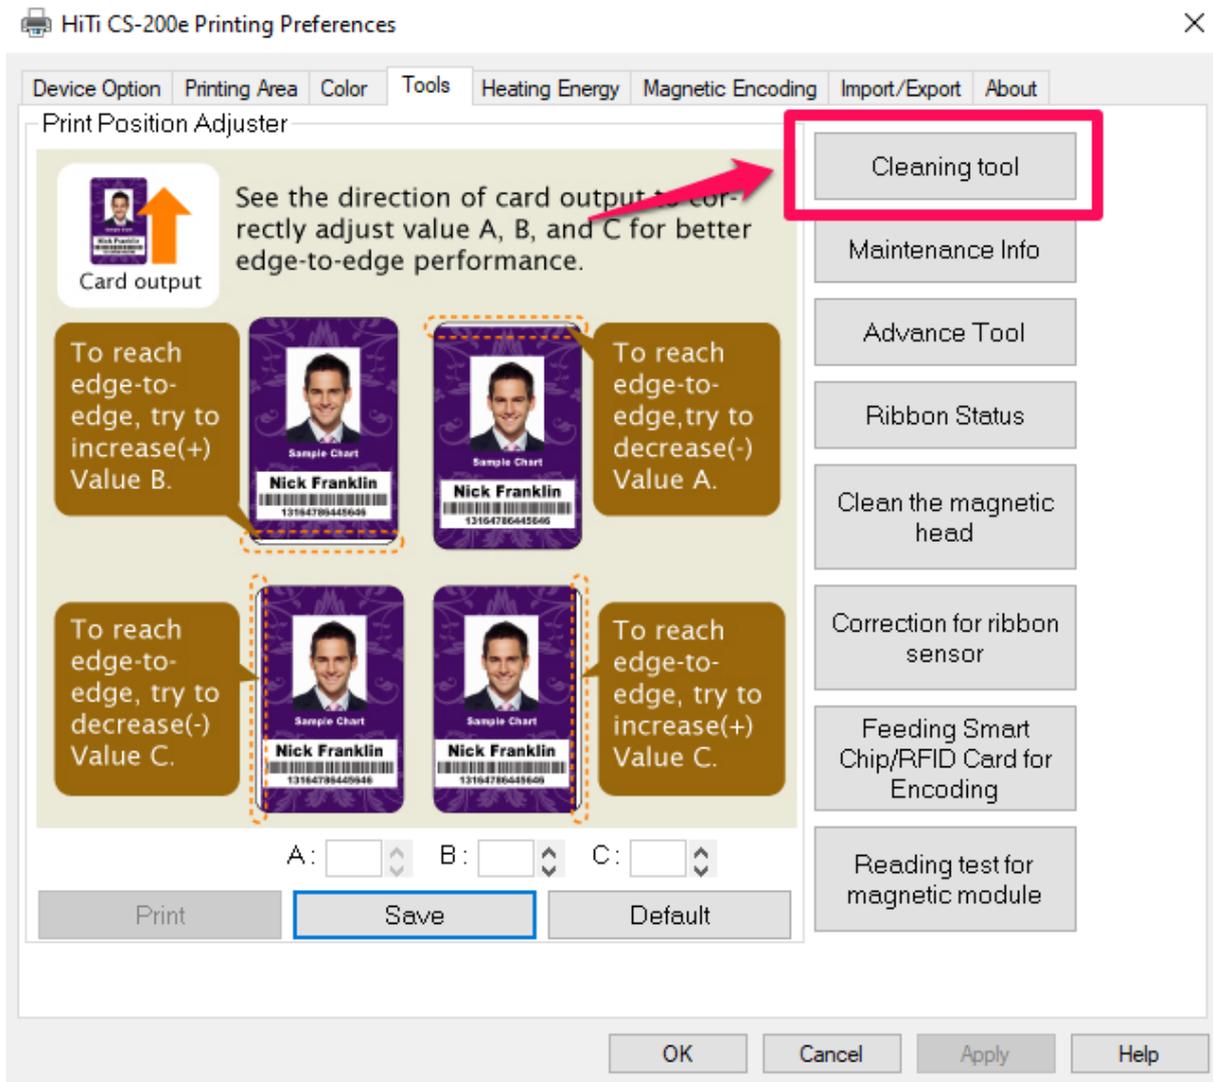

6. Follow the instructions to clean the printer.
7. Click on next after you followed the instructions.

Step 1:




Take off the ribbon cassette and keep the door open.

Next >

8. The same with the next window.
9. Click on next after you followed the instructions.

Step 2:

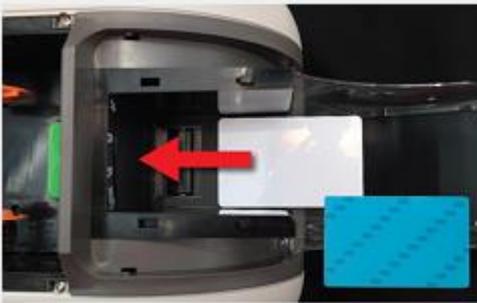


Remove the 3M peel off film on both sides of the clean card and put it into card hopper.


< Back

Next >


10. Click on next to start the cleaning process.

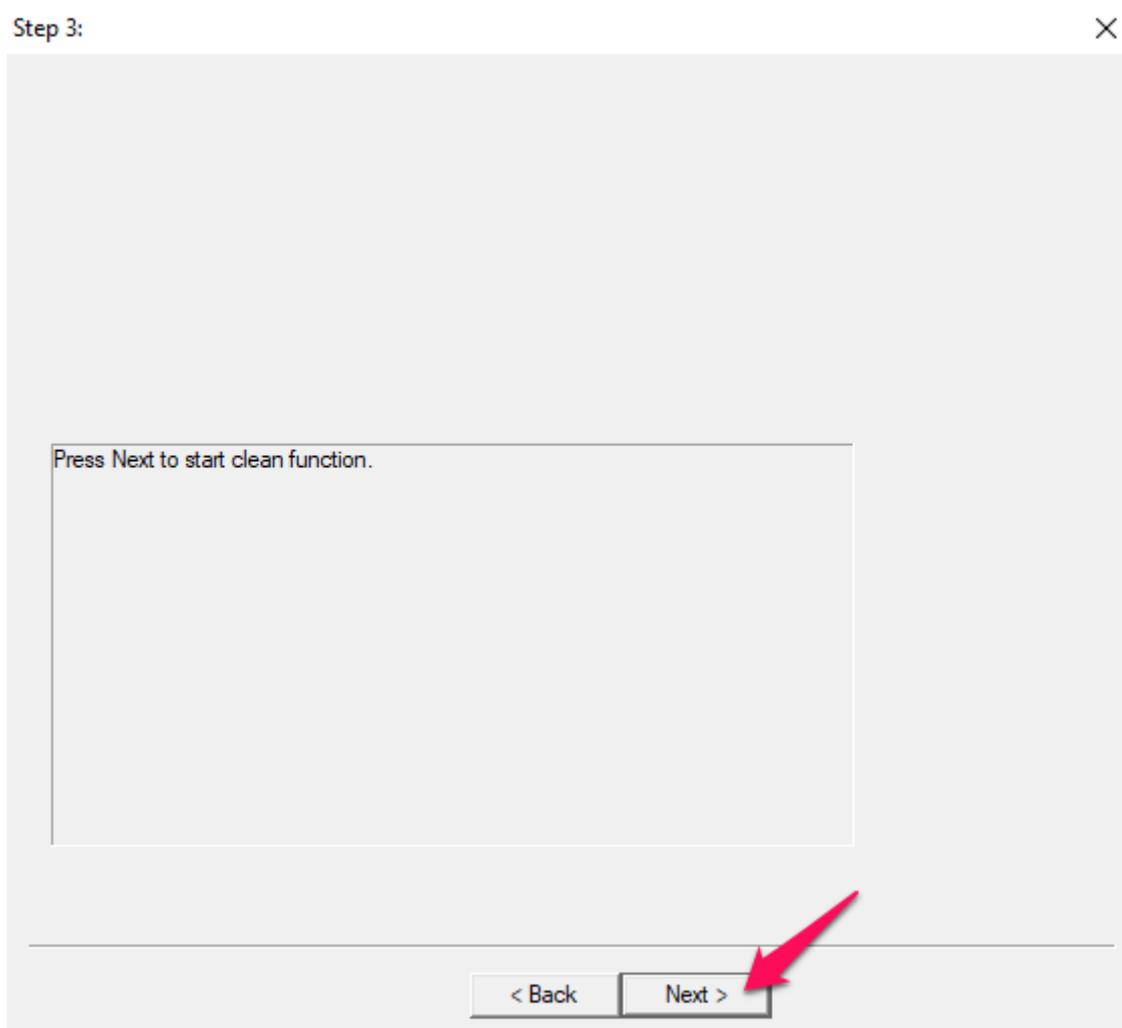

11. It takes a few seconds to clean the printer.

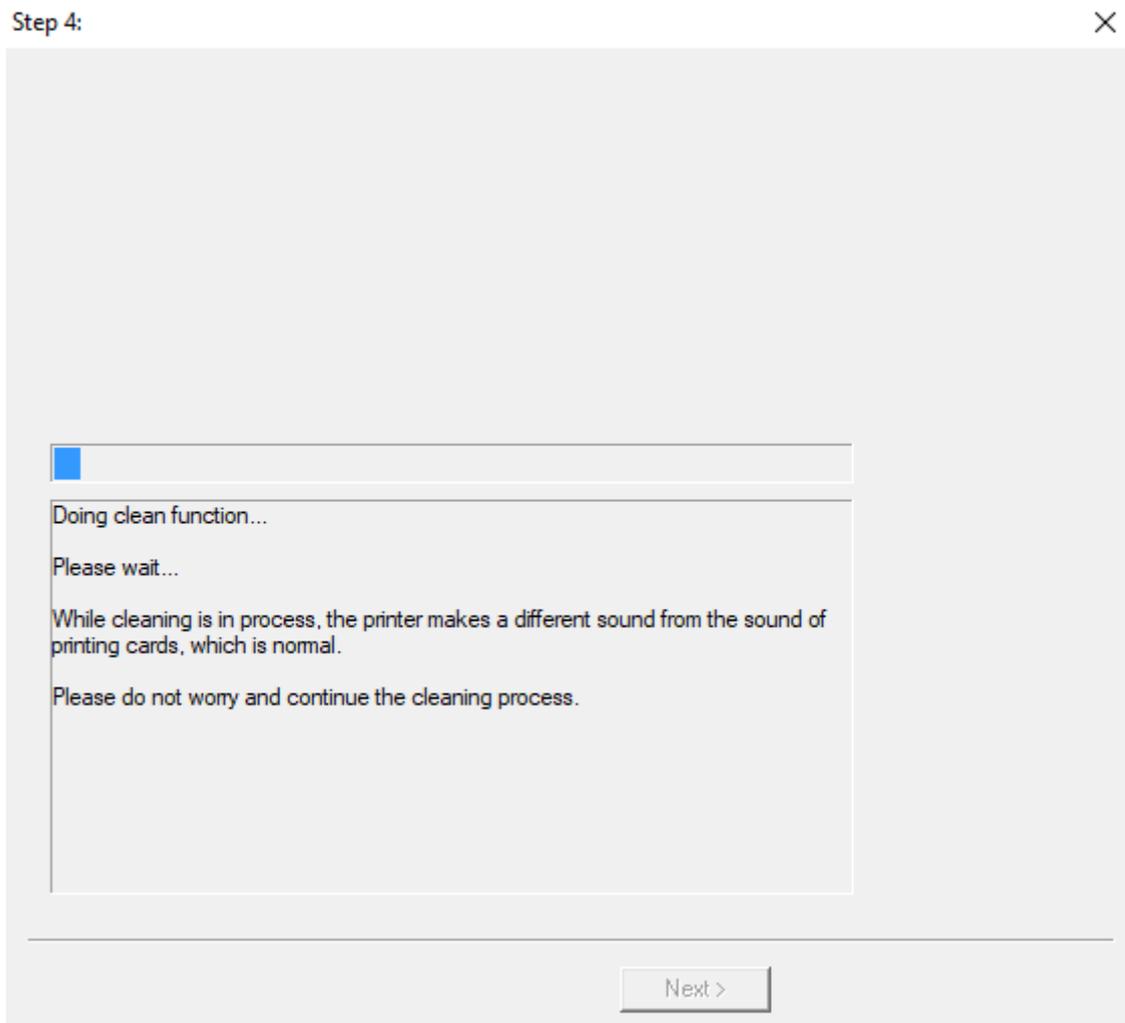


12. After the printer is done with his cleaning process you can press finish to exit.

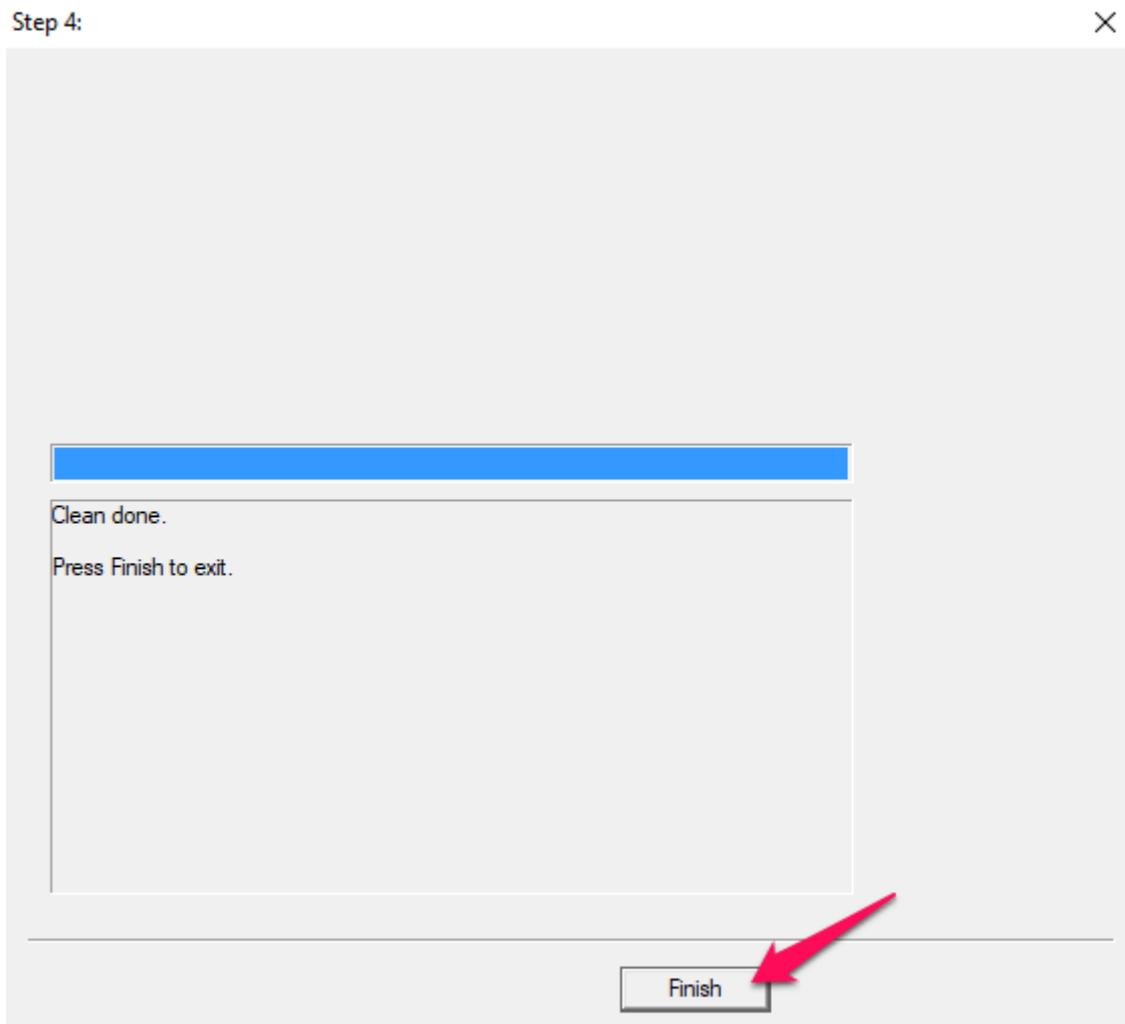


On the next page you will find the instruction to change the cleaning roller and how to clean the printhead.

### 13. How to change the cleaning roller.

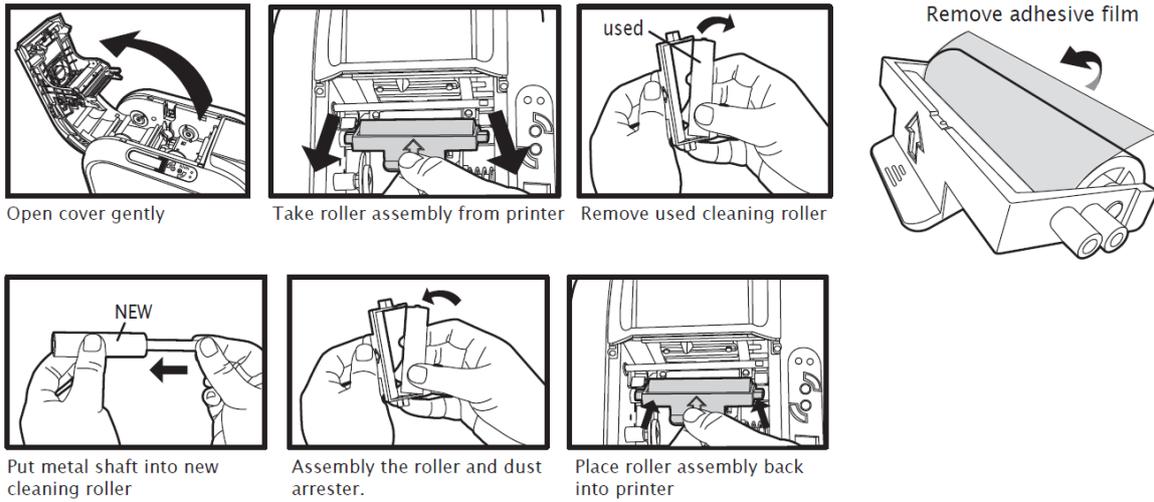

### 14. How to clean the printhead.

- a. Press the top opening button to open cover gently, and the TPH is attached to the ribbon door.
- b. Please use the sponge stick to clean the TPH.

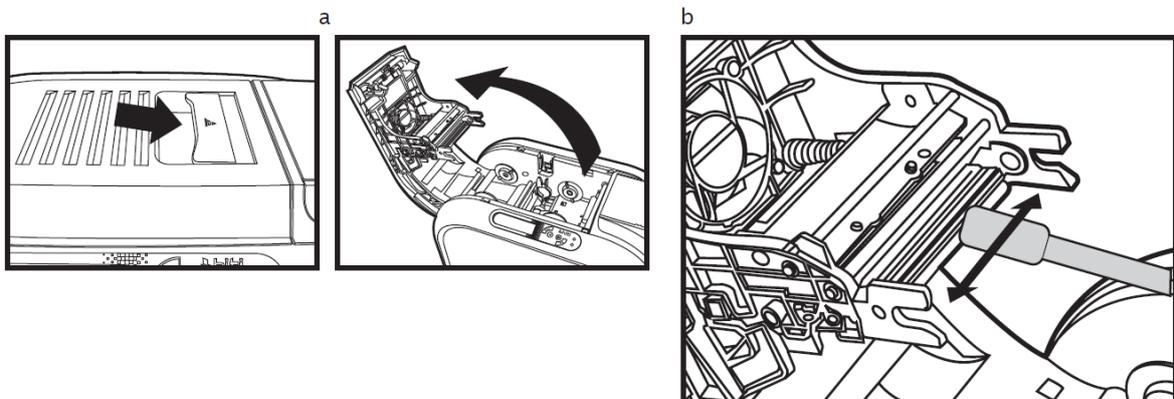

You have cleaned your printer.