


User Manual

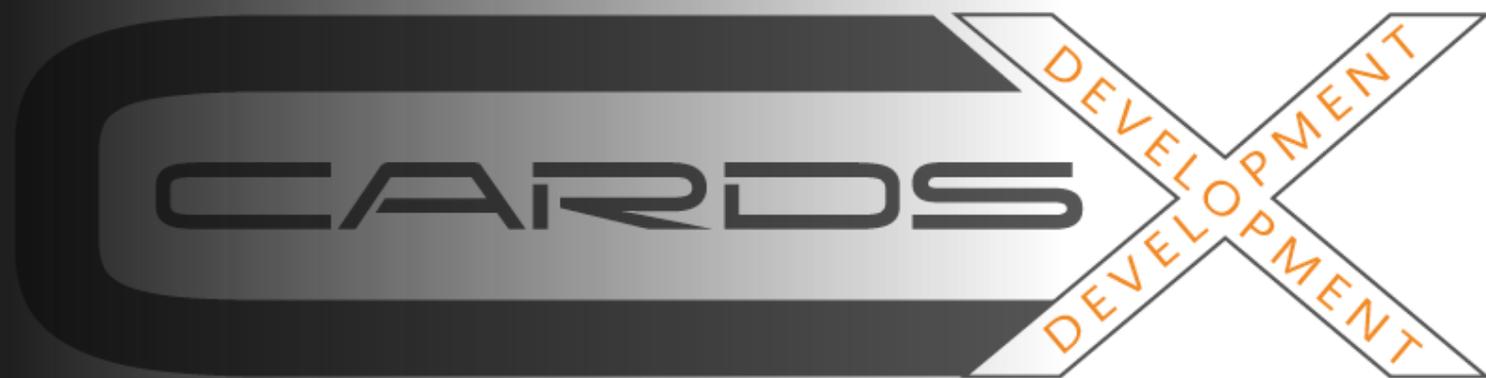


Accreditation & Access Solutions

Accessories ECP-XL card printer:




Screw Driver

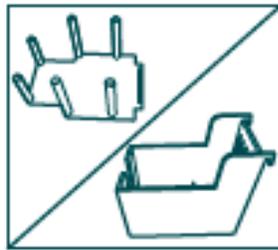


Card output hopper



Card input hopper

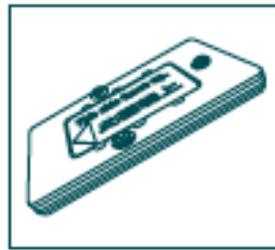


Input Weight

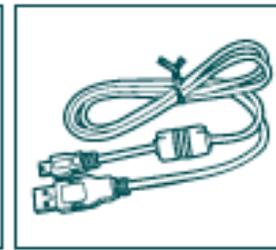


USB cable




Power adaptor

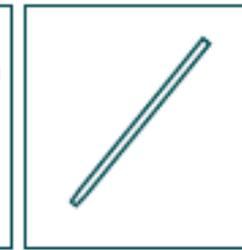


Crystal Rod

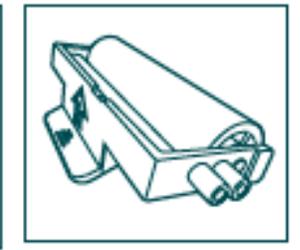

cleaning roller

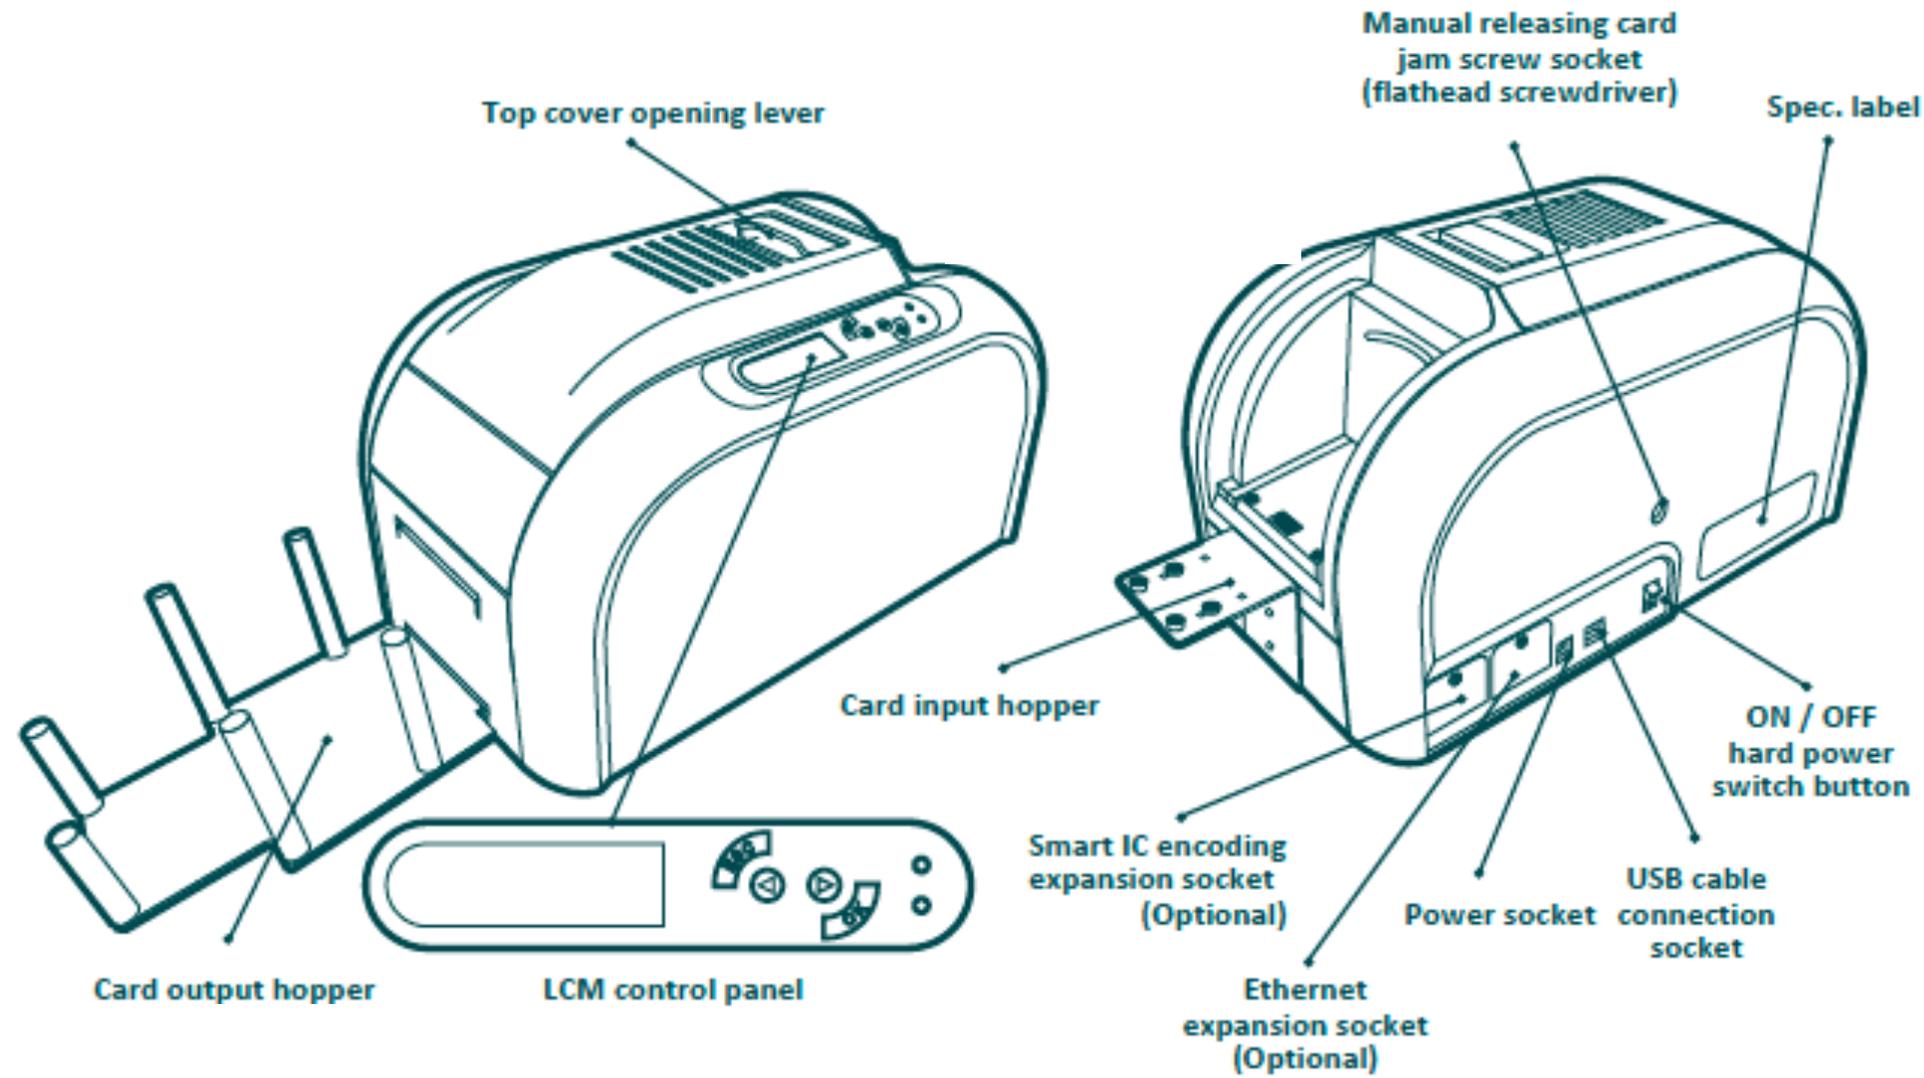

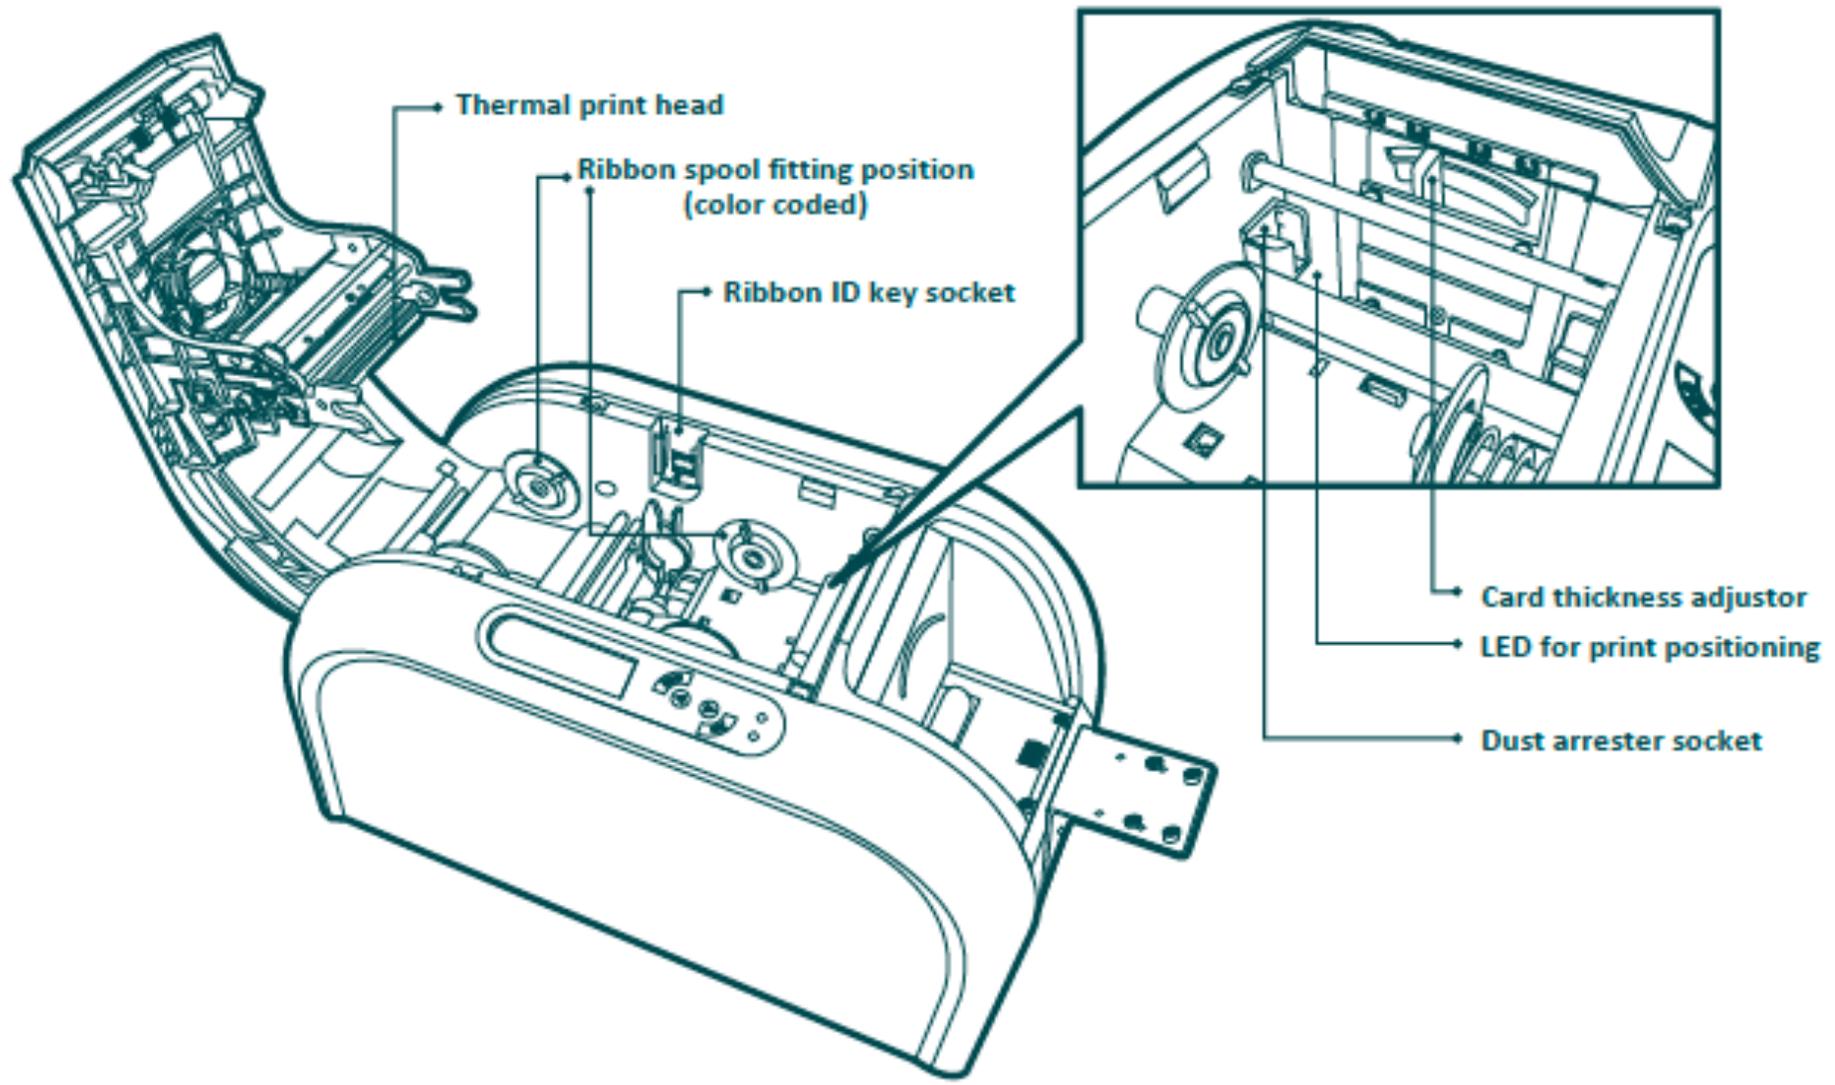

Open the top cover.









Place the ribbon ID key into ID key socket.

Insert the ribbon as shown.

Close the top cover slowly and press until a click sound is heard.



Accreditation & Access Solutions

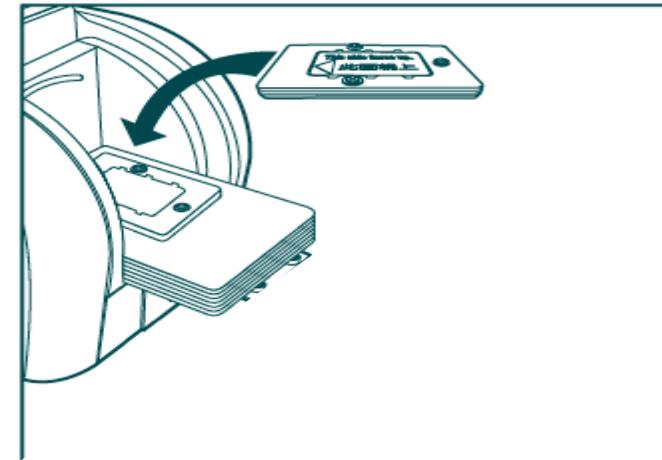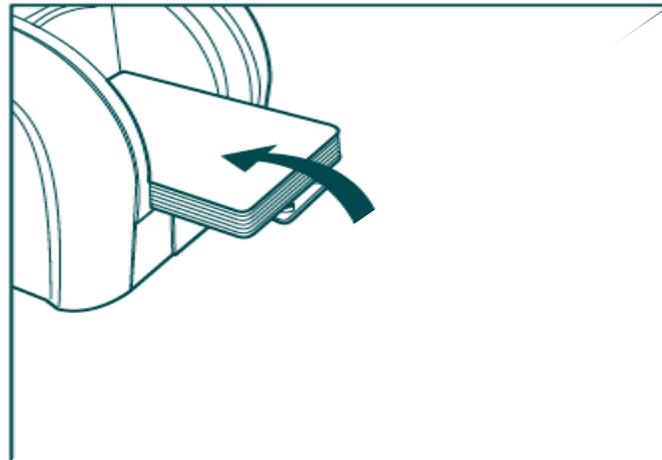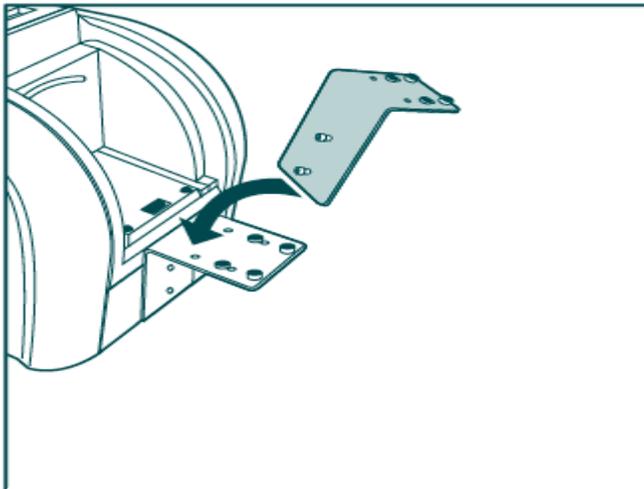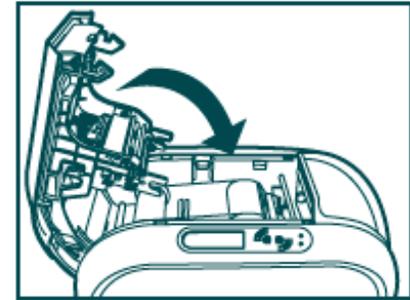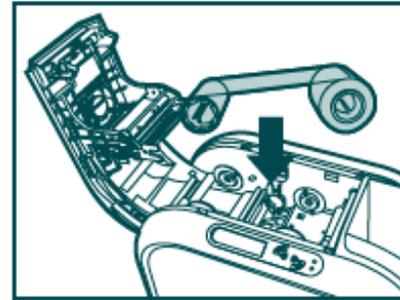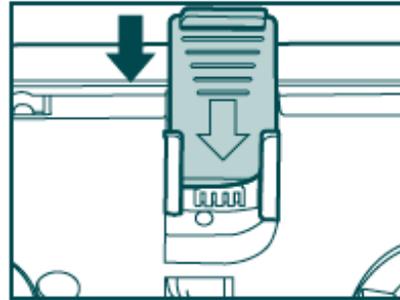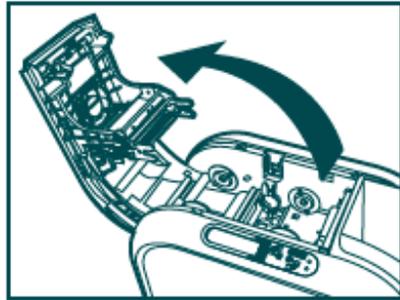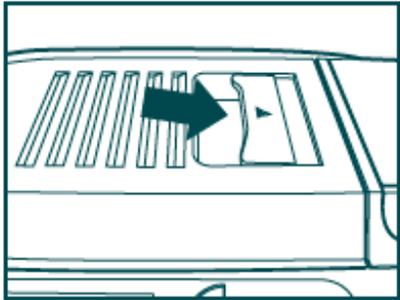

There are three positions of the 85.6 x 53.98 mm printing area on the XL cards. You can select the printing position by pressing the button inside the Printer an LED with the crystal rod as shown.

First hold the button until the LED blinks, then press shortly until the required colour appears and release the button immediately. The LED will blink some more times and then stop.



The position is now saved.

The colour of the LED displays the printing position as following:


Blue: central position with 140 mm card

Green: central position with 124 mm card


Red: bottom position with both card sizes

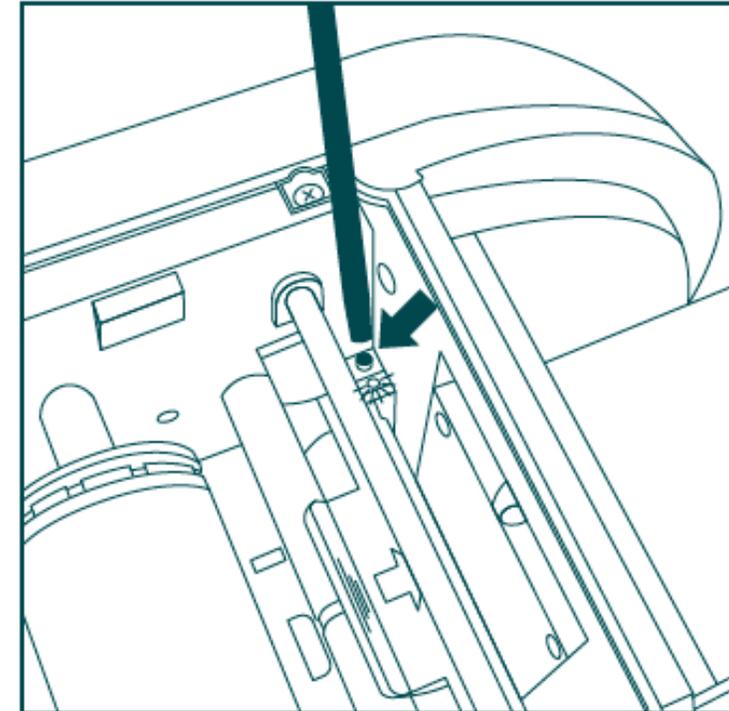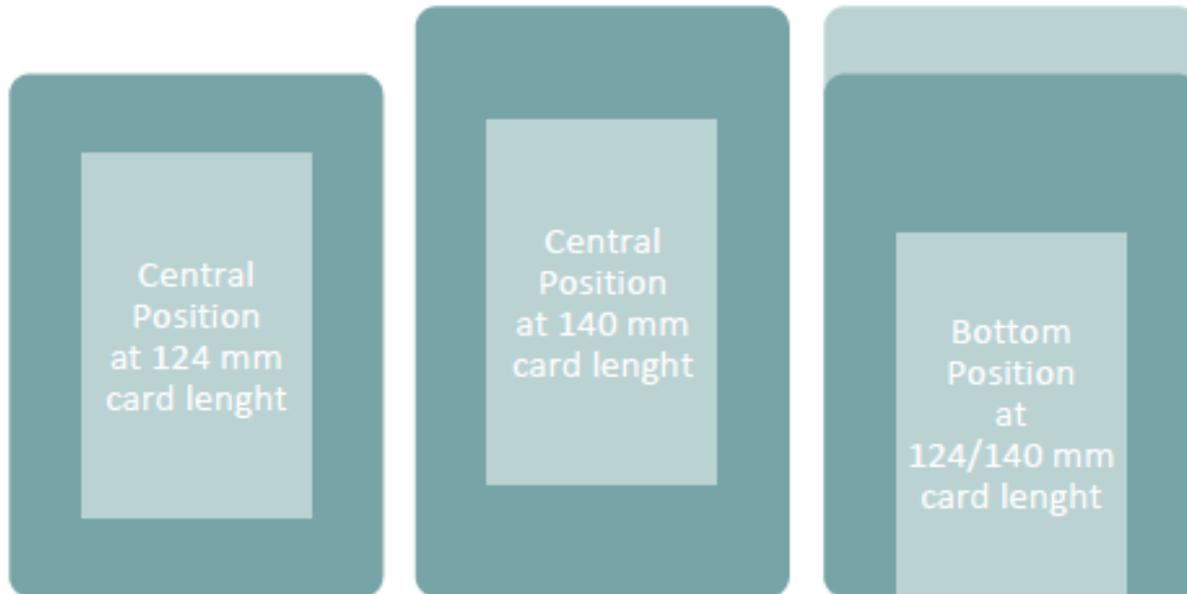


Cleaning Roller ECP-XL card printer:

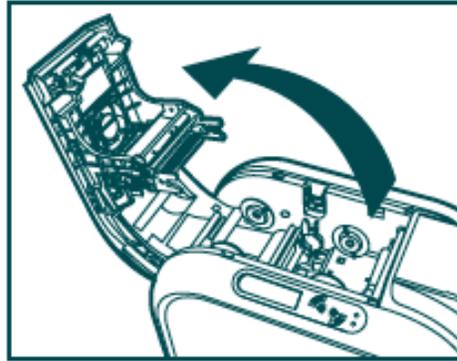


Open the cover gently

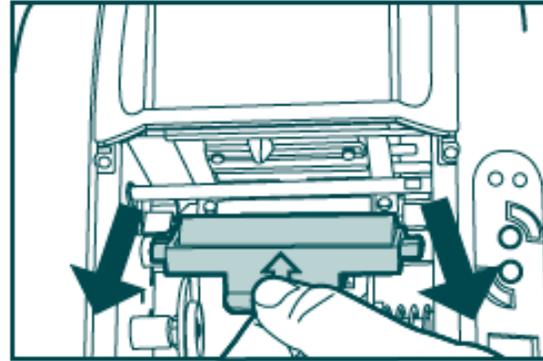


Take dust arrester from printer

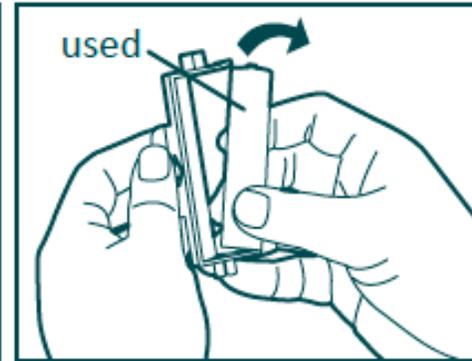


Remove used cleaning roller

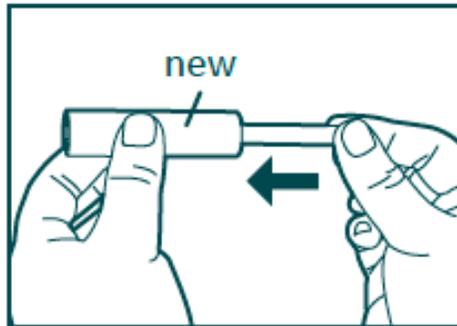


Put the metal shaft into new cleaning roller

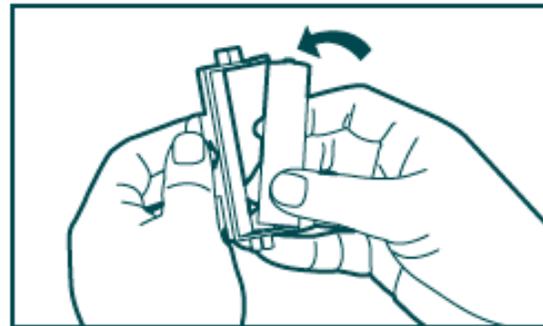

Assembly the roller and dust arrester

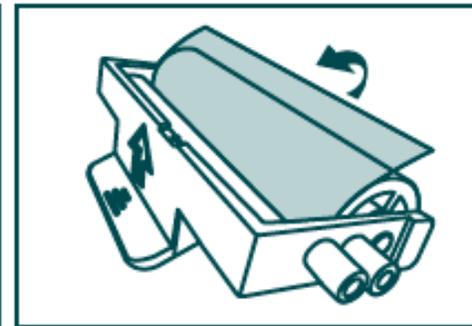

Remove adhesive film protection from cleaning roller

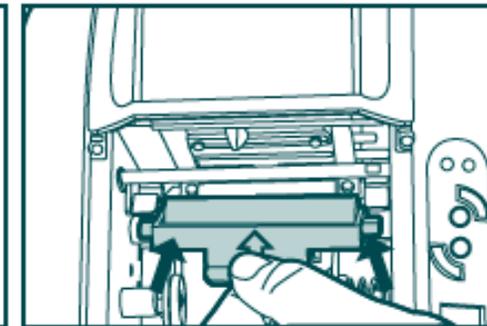

Place dust arrester back to the printer

Card Jam:

With printers do not open the top cover! Instead please remove the jammed card by the following instruction displayed on LCM control panel of the printer before continuing the printing job.

- Do not open the printer cover.
- Turn the screw on the backside of the printer clockwise until the card comes out.
- Now open the printer cover.
- Follow the instruction on the LCM control panel with three options: Auto removal, Semi-auto removal and Manual removal.

Opening the top cover by force will result in severe printer damage

