



Correction for ribbon sensor

1. Go to the „Devices and Printers“
2. Choose your printer
3. Open the “Printer Preferences”

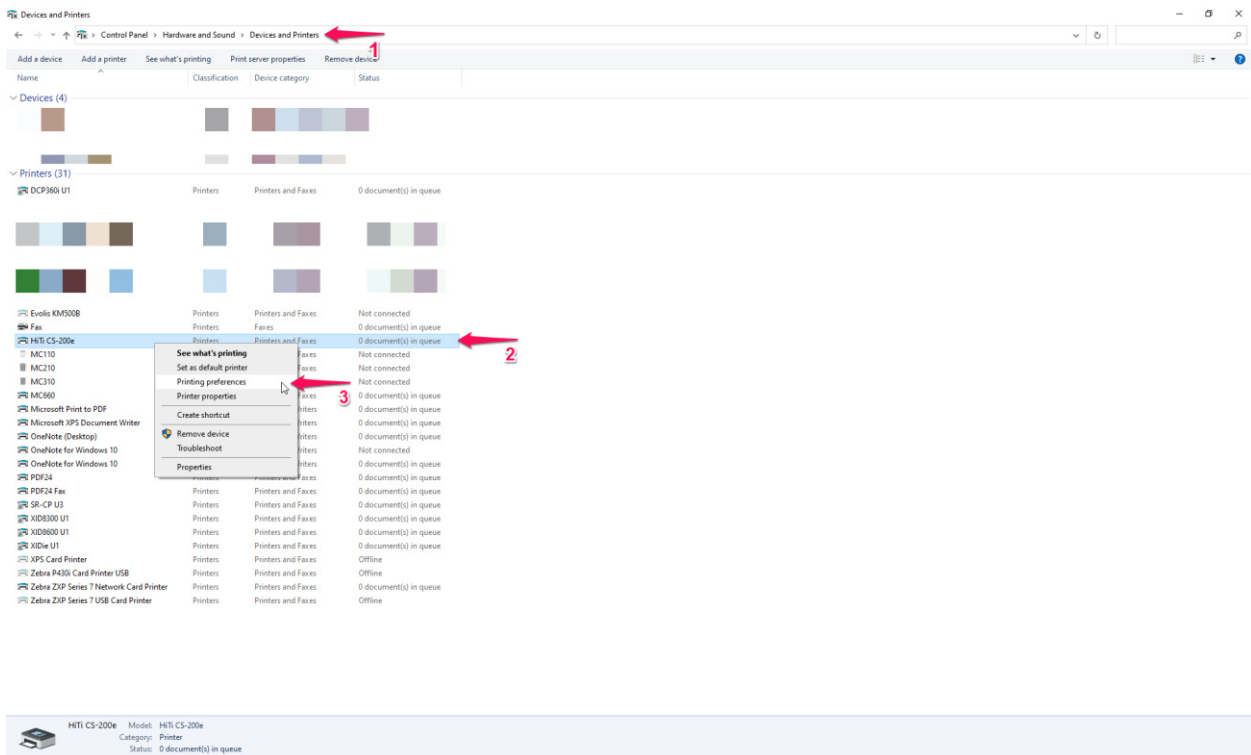

4. After opening the “Printer Preferences” you can go to “Tools”

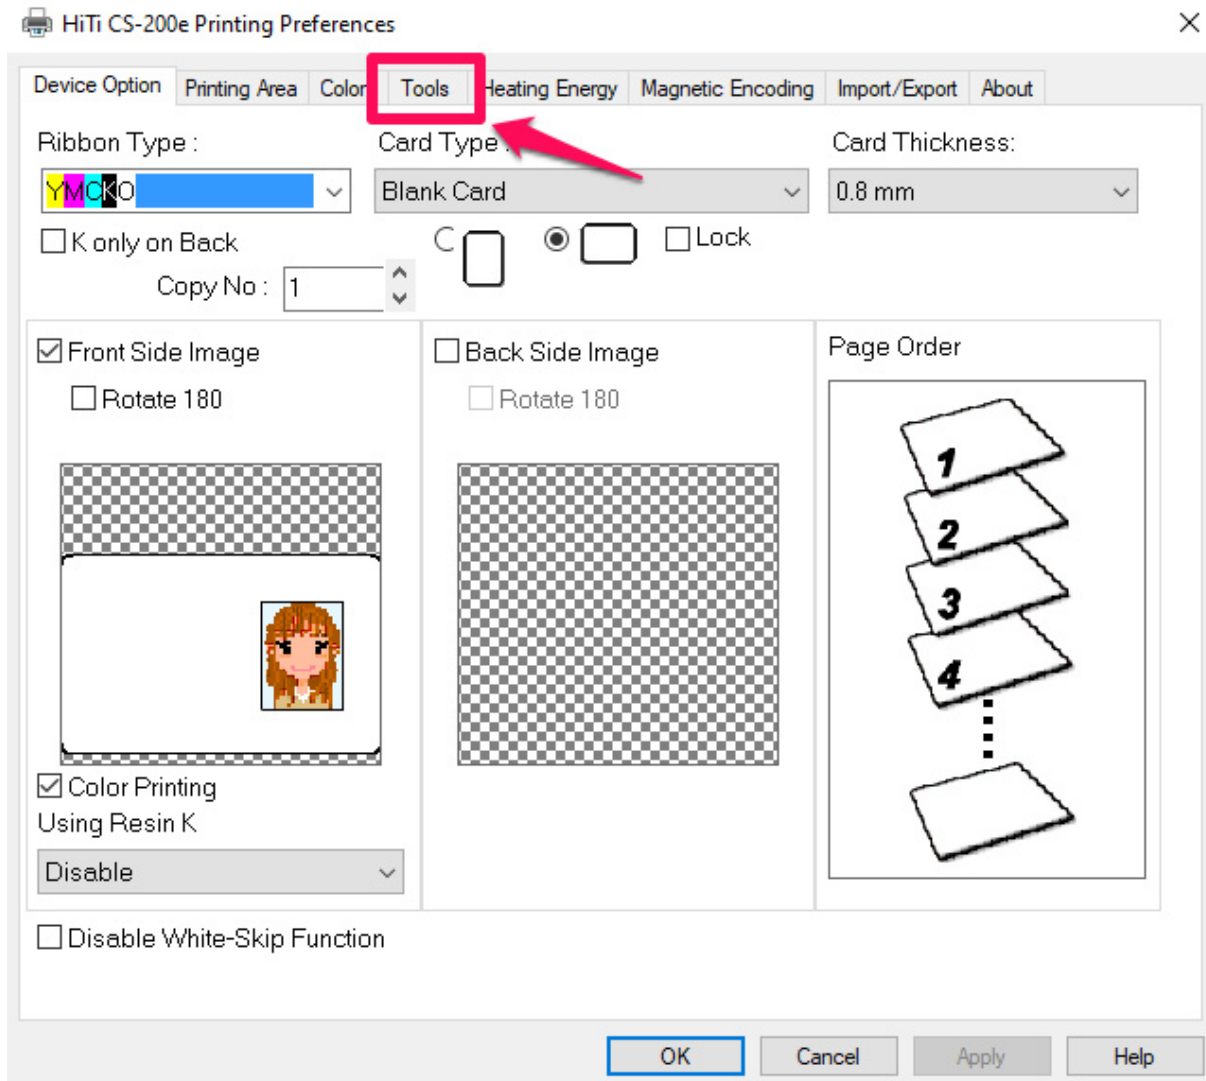

5. Correction for ribbon sensor.

Follow the instructions -> Remove ribbon and chip, close lid, clean the sensors and run the calibration.

